


ISD 2858 Pump Section Drawing& Parts List

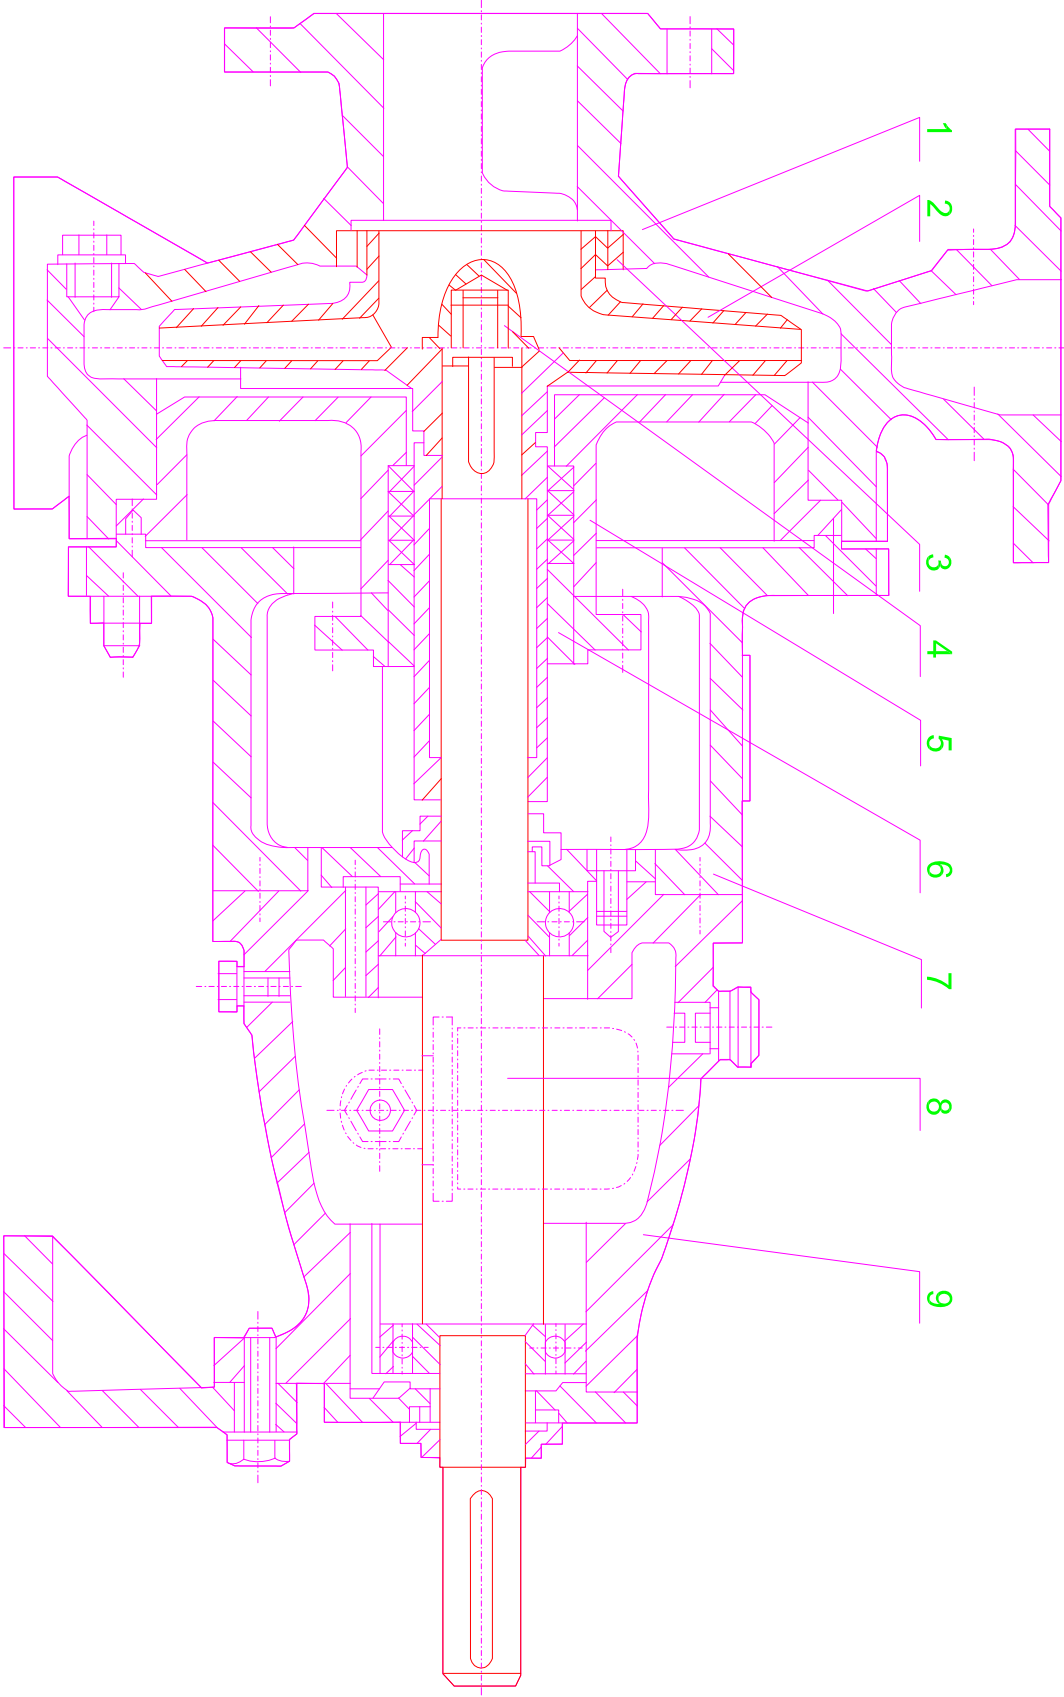

1	Casing	4	Impeller nut	7	Mid. Support
2	Impeller	5	Casing cover	8	Shaft
3	Casing Wearing Ring	6	Seal Housing Cap	9	Rear Support